Miele

Operating and installation instructions

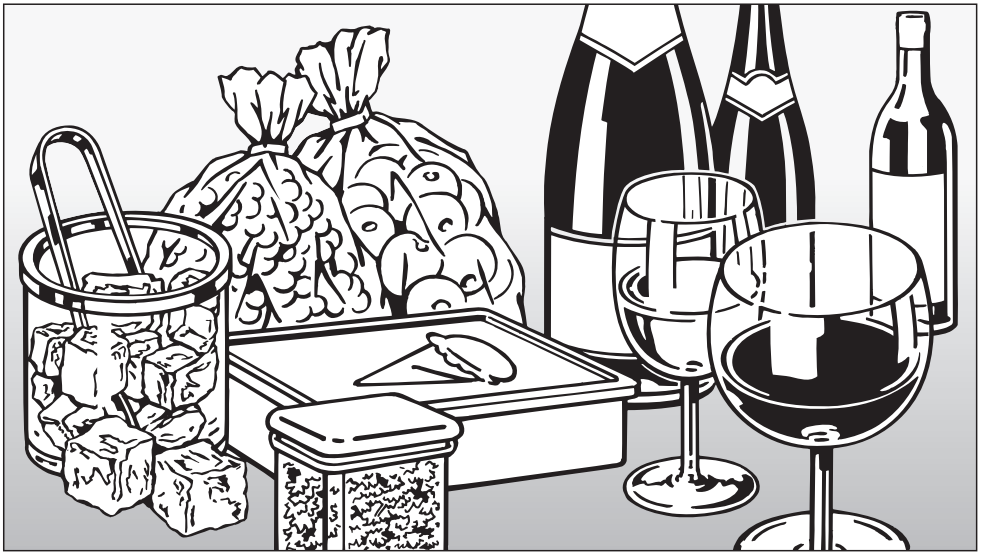

Frost free freezer with wine conditioning unit, ice cube maker and Dynamic cooling KWTN 14826 SDE ed

en - AU, GB, HK, NZ

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

M.-Nr. 07 808 300

Contents

Guide to the appliance 5
Caring for the environment 7
Warning and Safety instructions 8
How to save energy 13
Switching on and off 14
Operating the appliance 14
Switching on 14
Switching off 15
To switch off the wine conditioning zones separately 15
Settings mode 16
Switching the sensor tones on/off 17
Activating or deactivating the safety lock 17
Switching off for longer periods of time 18
The correct temperature 19
. . . in the wine conditioning zones 19
Isolator plate for thermal separation 19
. . . in the freezer section 20
Setting the temperature 20
Temperature range 21
Temperature display 21
Changing the temperature display brightness 21
Alarm 23
Temperature alarm 23
Door alarm 24
Using Dynamic cooling 25
Constant humidity (Dynamic cooling) sensor 25
Using Super freeze 27
Storing wine bottles 28
Wooden shelves 28
Descriptive labels 28
Maximum capacity 28
Air filtering with active charcoal filters 28
Freezing and storing food 29
Maximum freezing capacity 29
Freezing fresh food 29

Contents

Storing frozen food 29
Home freezing 30
Hints on home freezing 30
Packing 30
Before placing food in the freezer section 31
Placing food in the freezer section 31
Freezing large items 31
Freezer calendar 31
Defrosting 32
Cooling drinks 32
Freezer tray 32
Cool pack 33
Making ice cubes 34
Setting the water intake time for the ice cube maker 35
Automatic defrost 37
Cleaning and care 38
Cleaning the outer casing, the interior and accessories 38
Cleaning the condensate drain hole 39
Cleaning the ice cube tray 39
Ventilation gaps 40
Door seals 40
Metal grille at the back of the appliance 40
Active charcoal filters 42
To change the active charcoal filters 42
Problem solving guide 44
Noises 48
After Sales / Guarantee 49
Mains water connection 50
Notes on connecting to the mains water supply 50
Connection to the water inlet 50
Electrical connection IRL, U.K., ZA 52
Electrical connection AUS, NZ 53
Installation 54
Location 54
Climate range 54

Contents

Ventilation 55
Installation 55
Aligning the appliance 55
Appliance dimensions 56
Installing in a side-by-side combination 57
Installation 57
Joining the two appliances together 57
Changing the door hinging 61
Aligning the appliance doors 72
Building in the appliance 73

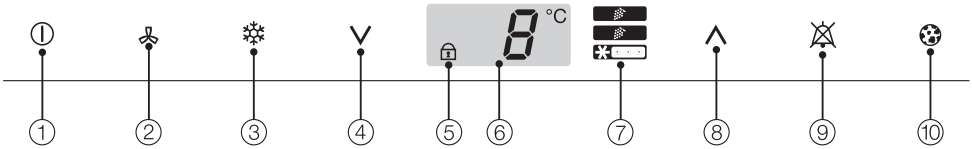

① On/Off sensor for the whole appliance and On/Off sensor for switching the wine conditioning zones on and off separately

② Constant humidity (Dynamic cooling) sensor for the wine conditioning zones

③ Super freeze sensor for the freezer section

④ Sensor for setting a lower temperature (∨)

⑤ Safety lock indicator light
(only visible when the Safety lock is activated)

⑥ Temperature display for the wine conditioning zones and for the freezer section

⑦ Sensor for switching between the wine conditioning zones and the freezer section
(top and middle = "Wine conditioning" symbol;
bottom = "Freezing" symbol)

⑧ Sensor for setting a higher temperature (∧)

⑨ Alarm off sensor
(only visible when the door or temperature alarm sounds)

⑩ Change active charcoal filter indicator
(only visible when the active charcoal filters need to be changed)

Guide to the appliance

① Wooden shelves with shelf edge trim for descriptive labels

② Active charcoal filter

③ Isolator plate for thermal separation of the wine conditioning zones

④ Condensate channel and drain hole (behind the metal covers)

⑤ Ice cube drawer with automatic ice cube maker

⑥ Freezer drawers with freezer calendar

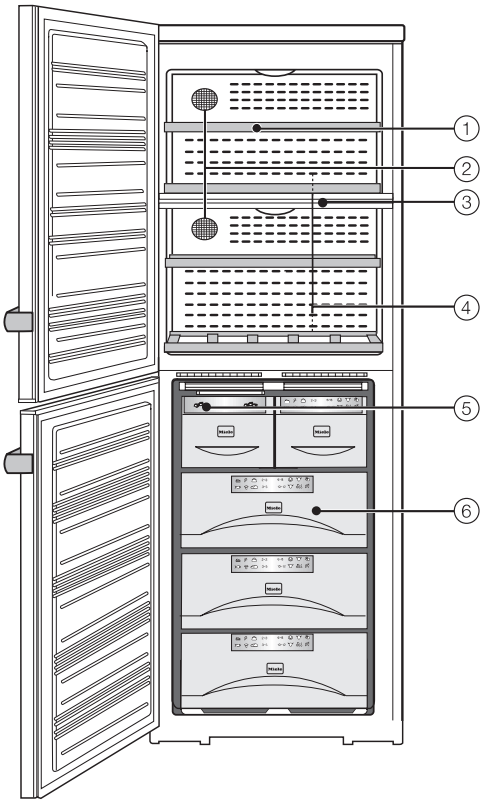

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure that they are recycled.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

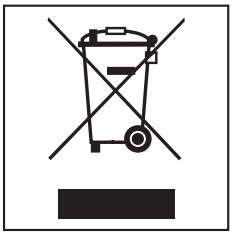

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

Take care not to damage the pipework at the back of it before or during transportation to an authorised collection depot.
In this way, refrigerant in the pipework and oil in the compressor will be contained, and will not leak out into the environment.

This appliance complies with all relevant local and national safety requirements. Improper use can, however, present a risk of both personal injury and material damage.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on the installation, safety, operation and care of the appliance.

Keep these instructions in a safe place and pass them on to any future user.

Correct application

▶ This appliance is intended for domestic use only for storing wine as well as for storing deep frozen food, freezing fresh food and for preparing ice.
Any other usage is not supported by the manufacturer and could be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it, or have been shown how to use it by a person responsible for their safety.

Safety with children

▶ This appliance is not a toy! To avoid the risk of injury, do not allow children to play with it or near it, or to play with the controls. Neither should they be allowed to swing on the door. Please supervise young children whilst you are using it. Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

Technical safety

▶ Before setting up the appliance, check it for any externally visible damage. Do not install and use a damaged appliance.
A damaged appliance is dangerous.

▶ If the connection cable is faulty it must only be replaced by a service technician authorised by the manufacturer to protect the user from danger.

R600a

▶ This appliance contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect. The use of this coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, but does not have any adverse effect on the performance of the appliance.
Care must be taken during the transportation and installation of the appliance that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.
In the event of any damage:
- avoid open flames and anything which creates a spark,
- disconnect from the mains,
- air the room in which the appliance is located for several minutes and
- contact the Service Department for advice.

▶ The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up.
For every 8 g of coolant at least 1 m^3 of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance.

▶ Safe operation of the appliance is only assured if it has been installed and connected in accordance with these operating and installation instructions.

▶ Before connecting the appliance, make sure that the connection data on the data plate (voltage and connected load) match the mains electricity supply.
This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for damage or injury caused by the lack of or inadequacy of an effective earthing system (e.g. electric shock).

▶ Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

▶ The appliance must be isolated from the electricity supply during installation, maintenance and repair work.
The appliance is only completely isolated from the electricity supply when:

– it has been switched off at the socket and the plug has been withdrawn, or
– the fuse from the fused spur connection unit has been withdrawn, or
– the mains fuse has been disconnected, or
– the screw-out fuse has been removed (in countries where this is applicable).

▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ This appliance may only be used in mobile installations such as ships, if a risk assessment of the installation has been carried out by a suitably qualified engineer.

▶ The manufacturer cannot be held liable for damage caused by a faulty connection to the mains water supply.

▶ Connection to the mains water supply and any repairs to the ice cube maker must only be carried out by a suitably qualified and competent person.

▶ The ice cube maker is not suitable for connection to a hot water supply.

▶ Before making plumbing connections, ensure the appliance is disconnected from the mains electricity supply.

▶ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Correct use

▶ Never handle frozen food with wet hands. Your hands may freeze to the frozen food. Danger of frost burn.

▶ Do not take ice cubes out with your bare hands and never place ice cubes or ice lollies in your mouth straight from the freezer.
The very low temperature of the frozen ice or lollies can cause frost burn to the lips and tongue.

▶ Do not refreeze thawed or partially thawed food. Defrosted food should be used up as quickly as possible, as food soon loses its nutritional value and goes off. Defrosted food may only be re-frozen after it has been cooked.

▶ Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Thermostats switching on may produce sparks which could present a fire hazard. Flammable compounds could explode.

▶ Do not operate any electrical equipment (e.g. an electric ice-cream maker) inside the appliance. Danger of sparking and explosion.

▶ Do not store cans or bottles containing carbonated drinks or liquids which could freeze in the freezer. The cans or bottles could explode. Danger of injury and damage to the appliance.

▶ When cooling drinks quickly in the freezer, make sure bottles are not left in for more than one hour; otherwise they could burst. Danger of injury and damage to the appliance.

▶ Observe the "use by" dates given on food to avoid the risk of food poisoning. Storage times will depend on several factors, including the freshness and quality of the food as well as the temperature at which it is stored. Follow the instructions given on the food manufacturer's packaging regarding storage conditions and "use-by" dates.

▶ Do not use sharp edged objects to

– remove frost and ice,

– separate frozen foods and remove ice trays.

They will damage the evaporator, causing irreversible damage to the appliance.

▶ Never place electric heaters or candles in the appliance to defrost it. These can damage the plastic parts.

▶ Do not use defrosting sprays or de-icers, as they might contain substances which could damage the plastic parts or which could cause a build-up of gases and pose a danger to health.

▶ Do not use any oils or grease on the door seals, as these will cause the seals to deteriorate and become porous with time.

▶ Do not block the ventilation gaps in the appliance as this would impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the appliance.

▶ The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range for your appliance is stated on the data plate inside the appliance.
Installing it in a room with too low an ambient temperature, e.g. a garage, can lead to the appliance switching off for longer periods so that it cannot maintain the required temperature.

▶ Do not use a steam-cleaning appliance to defrost or clean this appliance. Steam could reach the electrical components and cause a short circuit.

Disposal of your old appliance

▶ Before disposing of an old appliance, first make the door latch or lock unusable.
This way you will prevent children from accidentally locking themselves in and endangering their lives.

▶ Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

– puncturing the refrigerant channels in the evaporator.

– bending any pipework.

– scratching the surface coating.

Splashes of refrigerant can damage the eyes.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and safety instructions.

	Normal energy consumption	Increased energy consumption
Installation site	In a ventilated room.	In an enclosed, unventilated room.
	Protected from direct sunlight.	In direct sunlight.
	Not situated near to a heat source (radiator, oven).	Situated near to a heat source (radiator, oven).
	Where the ideal ambient room temperature is approx. 20°C.	Where there is a high ambient room temperature.
Temperature setting with a thermostat which is approximate (set in stages).	With a medium setting of 2 to 3.	With a high setting: the lower the temperature in the compartment, the higher the energy consumption.
Temperature setting with a thermostat which is exact to the degree (digital display).	Cellar section 8 to 12°C	On appliances with winter setting, please make sure that the winter setting is switched off when the ambient temperature is warmer than 16 °C.
	Refrigerator section 4 to 5 °C	
	PerfectFresh zone just above 0 °C	
	Freezer section -18°C	
	Wine storage section 10 to 12 °C	
Use	Only open the doors when necessary and for as short a time as possible.	Frequent opening of the doors for long periods will cause a loss of coldness.
	Store food in an organised way.	If food is not stored in an organised way, searching for an item will mean the door is open for longer.
	Allow hot food and drinks to cool down before placing them in the appliance.	Placing hot food in the appliance will cause the compressor to run for a long time, as the appliance will have to work harder to lower the temperature.
	Store food covered or packaged.	The evaporation or condensation of liquids will cause a loss of coldness in the refrigerator.
	Place frozen food in the refrigerator to defrost.	
	Do not over-fill the appliance to allow air to circulate.	
Defrosting	Defrost the freezer compartment when a layer of ice 0.5 cm thick has built up.	A layer of ice hinders the cold from reaching the frozen food, and causes an increase in energy consumption.

Before using for the first time

The stainless steel surface has a layer of protective foil to prevent scratching during transportation.

- Do not remove this foil until the appliance has been installed or built in.
- Treat the stainless steel surface with a suitable stainless steel conditioning agent (available from www.miele-shop.com).

Important: Stainless steel conditioner gives long lasting protection, and helps to prevent resoiling.

- Clean the inside of the appliance and the accessories with lukewarm water and a little washing-up liquid, and then dry with a soft cloth.

Important:
To ensure the correct functioning of the appliance, let it stand for between 1½ and 2 hours after transporting it to its final location before connecting it to the mains.

Operating the appliance

A light touch of the finger on the sensors is all that is required to operate this appliance.

Switching on

Both of the wine conditioning zones and the freezer section are switched on together with the On/Off sensor.

- Touch the On/Off sensor until the temperature display lights up.

The temperature displays for the wine conditioning zones show the current temperatures in the different zones.

If the temperature in the freezer section is above 0 °C, only bars will light up in the temperature display for the freezer section. As soon as the temperature is below 0 °C, the temperature display for the freezer section will show the current temperature in the freezer section.
The "Freezing" symbol and the Alarm off sensor will flash until the temperature in the freezer section has cooled down to the correct temperature for freezing.

The appliance will start to cool, and the interior lighting will come on when the door is opened.

To enable the temperature to get sufficiently cold inside the appliance, allow the appliance to run for a few hours before placing food in it.
Do not place food in the freezer section until the temperature is at least -18°C.

You switch between the wine conditioning zones and the freezer section with this sensor.

If you want to select the freezer section (to check the temperature, for example),

- touch the sensor for switching between the wine conditioning zones and the freezer section until the "Freezing" symbol lights up yellow.

Depending on which section you have selected, you can

– select Dynamic cooling,

– select the Super freeze function or

– adjust the temperature.

Please refer to the relevant section for more information.

Cool pack

Place the cool pack in the top freezer drawer or to save space on the freezer tray. The cool pack will be at its most effective after it has been in the freezer for approx. 24 hours.

Switching off

- Touch the On/Off sensor until all of the indicators go out. (If this does not happen, the safety lock is still activated).

If one or both of the wine conditioning zones is switched on, then the wine conditioning zones and the freezer section will switch off one after the other.

The interior light will not come on when you open the door and the cooling process will be switched off.

To switch off the wine conditioning zones separately

The wine conditioning zones can be switched off separately without having to switch off the freezer section. This is useful e.g. whilst on holiday.

Both wine conditioning zones are switched on or off simultaneously.

- Switch the appliance on and select one of the wine conditioning zones.

The corresponding "Wine conditioning" symbol will light up yellow.

- Touch the On/Off sensor until the "Wine conditioning" symbol goes out.

The interior light will not come on when you open the door and the wine conditioning zones are switched off.

The freezer section remains switched on and the "Freezing" symbol is lit up.

To switch the wine conditioning zones back on again

- Select one of the wine conditioning zones so that the corresponding Wine conditioning symbol lights up yellow, and touch the On/Off sensor until the temperature display lights up, or
- Switch the appliance off and then back on again.

The appliance will start to cool, and the interior lighting will come on when the door is opened.

Settings mode

Certain settings on the appliance can only be selected in the settings mode.

How to select the settings mode and how to change the settings is described in the relevant section of these instructions.

Overview of functions that can be selected in the settings mode:

To enter or leave the settings mode	c
To switch the sensor tones on/off (see "Switching on and off")	b
To confirm that the active charcoal filters have been changed (see "Active charcoal filters")	h
To switch the safety lock on/off (see "Switching on and off")	u
To change the brightness of the temperature display (see "The correct temperature")	d
To set the water intake time for the ice cube maker (see "Making ice cubes")	E

The door alarm is disabled when the appliance is in the settings mode. As soon as the door is closed, the door alarm is activated again.

Switching the sensor tones on/off

The sensor tone which sounds each time a sensor is touched can be deactivated.

- Touch and leave your finger on the ∨ sensor.

- At the same time, briefly touch the On/Off sensor (without letting go of the ∨ sensor).
- Leave your finger on the ∨ sensor for another 5 seconds until *c* appears in the display.
- Touch the ∨ sensor repeatedly until *b* appears in the display.
- Touch the On/Off sensor.
- By touching the ∨ sensor, you can now select whether the sensor tones are switched on or off:
  b 0: Sensor tones are switched off
  b 1: Sensor tones are switched on
  b –: Return to menu.

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm a new setting.
- Touch the ∨ sensor repeatedly until *c* appears in the display.
- Touch the On/Off sensor.

You have now left the settings mode.

Activating or deactivating the safety lock

The safety lock can be activated to prevent the appliance being switched off inadvertently.

- Touch and leave your finger on the ∨ sensor.

- At the same time, briefly touch the On/Off sensor (without letting go of the ∨ sensor).
- Leave your finger on the ∨ sensor for another 5 seconds until *c* appears in the display.
- Touch the ∨ sensor repeatedly until *u* appears in the display.
- Touch the On/Off sensor.
- By touching the ∨ sensor, you can now select whether the safety lock is switched on or off:
  u 0: The safety lock is deactivated
  u 1: The safety lock is activated
  u –: Return to menu.

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm a new setting.
- Touch the ∨ sensor repeatedly until c appears in the display.
- Touch the On/Off sensor.

You have now left the settings mode.

The safety lock indicator will light up in the temperature display when the safety lock has been activated.

Switching off for longer periods of time

If the appliance is not going to be used for a longer period of time, e.g. whilst on holiday:

- switch the appliance off,
- switch off at the wall socket and withdraw the plug,
- close the stopcock for the water inlet,
- empty and clean the ice cube tray,
- clean the appliance out and
- leave the doors ajar to air the appliance.

If, during a long absence, the appliance is switched off but not cleaned out and the doors are left shut, there is a danger of mould and odours building up inside the appliance.

. . . in the wine conditioning zones

Wine keeps on maturing depending on the surrounding conditions. The length of time for which wine can be kept in good condition will therefore depend not only on the temperature but also on the air quality.

Wine can be stored at a temperature between 5°C and 18°C. The optimum temperature for white wine is between **8 and 12 °C**. It is best to take red wine out of the wine conditioning zones about two hours before drinking. Open the wine to allow it to breathe and to develop its aroma. After two hours, red wine will be at the correct temperature for drinking.

If wine is stored at a temperature above 22°C it will mature too quickly. Wine should not be stored below 5°C for a long period of time as it will not mature fully at this low temperature.

Fluctuations in temperature put wine under stress and interrupt the maturing process. It is therefore very important to maintain a constant temperature.

Safety features

A thermostat prevents the temperature in the wine conditioning zones from falling below 2°C. If the external temperature should drop below this level, a heater element switches on automatically to keep the temperature inside as constant as possible.

Isolator plate for thermal separation

The appliance has a fixed isolator plate which divides the top cabinet into two different temperature zones. You can use the upper and lower zones for storing different types of wine, e.g. red wine and white wine.

The following temperatures are recommended for the different types of wine:

Red wine:	+14 °C to +18 °C
Rosé wine:	+10 °C to +12 °C
White wine:	+8 °C to +12 °C
Sparkling white wines:	+7 °C to +9 °C
Champagne:	+5 °C to +7 °C

. . . in the freezer section

To freeze fresh food and to store frozen food for a long time, a temperature of **-18 °C** is required. At this temperature the growth of micro-organisms is generally halted. As soon as the temperature rises above -10 °C, the micro-organisms become active in the food again so that it cannot be kept as long. For this reason, partially defrosted or defrosted food must not be re-frozen. Food may be re-frozen once it has been cooked, as the high temperatures achieved when cooking destroy most micro-organisms.

It is very important to set the correct temperature for storing food in the appliance. Micro-organisms will cause food which is not stored at the correct temperature to deteriorate rapidly. Temperature influences the growth rate of these micro-organisms. Reducing the temperature reduces their growth rate.

The temperature in the appliance will rise:

– the more often the door is opened and the longer it is kept open,

– if too much food is stored in it at once,

– the warmer the food is which is being put into it,

– the higher the ambient temperature surrounding the appliance.
The appliance is designed for use in specific ambient temperatures (climate ranges). Do not use in ambient temperatures for which it is not designed.

Setting the temperature

■ Select one of the wine conditioning zones or the freezer section by touching the sensor until the appropriate symbol lights up yellow.

You can set the temperatures in the wine conditioning zones independently of one another.

■ You can now use the arrow sensors on either side of the temperature display to set the temperature you require.

By touching the

∨ sensor: the temperature will get colder

∧ sensor: the temperature will get warmer.

The temperature being set will flash in the display.

The following information shows in the display when the sensors are touched:

– Touching a sensor once: the **last temperature selected** flashes.

– Each subsequent touch of a sensor: adjusts the temperature shown in 1 °C steps.

– Leaving a finger on the sensor: changes the temperature continuously.
When the highest or lowest temperature in the range is reached, the ∨ or ∧ sensor disappears.

Approx. 5 seconds after taking your finger off a sensor, the **average, current** temperature in the wine conditioning zones or freezer section is automatically shown.

If you have adjusted the temperature, **wait for approx. 6 hours if the appliance is not very full** and **for approx. 24 hours if the appliance is full** before checking the temperature display, as it will take this long for the display to give an accurate reading. If, after this time, the temperature is still too high or too low, you will need to adjust it again.

Temperature range

The temperature can be adjusted:

– In the wine conditioning zones from 5 °C to 20 °C

– In the freezer section from -14 °C to -28 °C

The ambient temperature in the room and the installation location can affect the time it takes for the appliance to reach the lowest temperature. If the ambient temperature is too high, the appliance may not reach the lowest temperature.

Temperature display

During normal operation the temperature display on the control panel shows the temperature in the middle of the wine conditioning zones or the temperature in the warmest part of the freezer section.

Changing the temperature display brightness

The temperature display brightness can be adjusted to suit the lighting conditions of the room.

■ Touch and leave your finger on the ∨ sensor.

■ At the same time, briefly touch the On/Off sensor (without letting go of the ∨ sensor).

■ Leave your finger on the ∨ sensor for another 5 seconds until *c* appears in the display.

■ Touch the ∨ sensor repeatedly until *d* appears in the display.

■ Touch the On/Off sensor.

■ The temperature display brightness can now be changed by touching the ∨ sensor:
d 0: Maximum brightness
d 1: Reduced brightness
d –: Return to menu.

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm a new setting.
- Touch the ∨ sensor repeatedly until c appears in the display.
- Touch the On/Off sensor.

You have now left the settings mode.

Your appliance has been fitted with a warning system to protect your stored wine and frozen food from an unsuitable temperature and also to avoid energy being wasted if a door is left open.

Activating the alarm system

The alarm system is always active. It does not have to be switched on manually.

Temperature alarm

An alarm will sound if the temperature in the freezer section becomes warm.

An alarm will sound if the temperature in one of the wine conditioning zones becomes too warm or too cold.

The alarm off sensor will flash red and the symbol for the section or zone affected will flash.

The alarm will sound, the alarm off sensor will flash red and the relevant symbol will flash, for example,

– when freezing large amounts of food at once.

– if the doors have been left open for a while, e.g. in order to load, to re-arrange or to take out frozen food or wine bottles.

– in the event of a power cut.

The alarm will stop and the indicators will go out as soon as the temperature has reached the correct level again.

Switching the temperature alarm off early

If the noise disturbs you, you can switch the alarm off early if you wish.

■ Touch the alarm off sensor.
The alarm will stop.
The alarm off sensor and the relevant symbol will continue to flash until the correct temperature has been reached.

However, if the temperature in the freezer section remains above -18 °C for a long time, check that the frozen food has not started to defrost. If it has, check that the food is safe to use and if it is, then use it as soon as possible.

Alarm

Door alarm

The alarm will sound if a door is left open for more than 2 minutes.

The alarm off sensor will light up red and the symbol for the section or zones with the opened door will flash.

The alarm will stop and the indicators will go out as soon as the door is closed.

Switching the door alarm off early

If the noise of the door alarm disturbs you, you can switch it off early if you wish.

- Touch the alarm off sensor.
  The alarm will stop.
  The alarm off sensor will light up constantly and the symbol for the section or zones with the opened door will continue to flash until the door has been closed.

Humidity in the wine conditioning zones

It is very important to store wine in an atmosphere with a high humidity level (60 - 70%) so that the corks remain moist on the outside. A refrigerator with its low humidity level is therefore not the best place to store wine. Low humidity causes corks to dry out from the outside, and so they do not seal the bottles as tightly. Wine should be stored lying down to keep the corks moist from the inside too. Air entering the bottle will inevitably spoil the wine.

Useful tip: Before serving, stand the wine upright for at least two hours, or the entire day if possible, to allow any sediment to settle at the bottom of the bottle.

Constant humidity (Dynamic cooling) sensor

Dynamic cooling raises the relative humidity inside the wine conditioning zones which prevents corks from drying out. Dynamic cooling also distributes the humidity and the temperature evenly around the interior so that you can store all your wine under the exactly the same excellent conditions.

Switching on Dynamic cooling

If you would like to use the wine conditioning zones to store wine long term, we recommend that you keep the dynamic cooling function switched on. This will create a stable climate in the cabinet which imitates that of a wine cellar.

- Select the wine conditioning zone you want to use dynamic cooling in.

The corresponding "Wine conditioning" symbol will light up yellow.

- Touch the Constant humidity (Dynamic cooling) sensor. It will light up yellow.

Using Dynamic cooling

To save energy, the fan for Dynamic cooling switches off whilst the door is open.

Switching off Dynamic cooling

- Select the relevant wine conditioning zone.

The corresponding "Wine conditioning" symbol will light up yellow.

- Touch the Constant humidity (Dynamic cooling) sensor. It will dim to a pale yellow colour.

Even if dynamic cooling has not been switched on, the two fans in the appliance will come on automatically when the cooling system switches on to ensure your wine is kept in the optimum climate.

Switch the Super freeze function on before putting fresh food into the freezer section.

This helps food to freeze quickly and retain its nutrients, vitamins, flavours and appearance.

Super freeze is not necessary:

– when placing food in the freezer that is already frozen.

– when freezing up to 2 kg fresh food daily.

Switching on Super freeze

When freezing small quantities of food in the freezer, the Super freeze function should be switched on **6 hours beforehand**. When freezing **the maximum load of food** the Super freeze function should be switched on **24 hours beforehand**.

■ Select the freezer section.

The "Freezing" symbol will light up yellow.

■ Touch the Super freeze sensor. It will light up yellow.

The appliance works at full power to lower the temperature in the freezer section.

Switching off Super freeze

Depending on the amount of food placed in the freezer section, the Super freeze function will switch off automatically after approx. 30 to 65 hours. The appliance will then continue to work at normal power.

To save energy, the Super freeze function can be switched off once a constant temperature of -18 °C or colder has been reached in the freezer section.

■ Select the freezer section.

The "Freezing" symbol will light up yellow.

■ Touch the Super freeze sensor. It will dim to a pale yellow colour.

The appliance will continue running at normal power.

Wooden shelves

Any vibration or movement of the bottle can affect the wine by interrupting the natural respiration process and so impair the taste.

As far as possible, store bottles of the same type of wine beside each other on the same shelf. Removing a bottle of one type will then leave the other types undisturbed and will avoid the need to move different bottles around.

The upper wooden shelves in each zone are on runners which can be pulled out to make it easier to store and remove bottles.

The wooden shelves can be removed if required.

- Pull out the wooden shelf on its runners until it stops, then lift it up and out.
- To replace the shelf, click it into place on the extended runners.

Descriptive labels

Use the labels supplied to identify your wine quickly and easily. Insert the labels into the shelf edge trim from above.

Additional labels can be purchased from your Miele Dealer or the Miele Spare Parts Department.

Maximum capacity

A total of 41 bottles (0.75 litre) can be stored in the wine conditioning zones.

Air filtering with active charcoal filters

The active charcoal filters in the wine conditioning zones achieve optimum air quality by filtering the incoming air.

Fresh air from the outside enters the appliance via the active charcoal filters. The dynamic cooling system then distributes the air evenly throughout the cabinet.
Filtering the incoming air through the active charcoal filters ensures that all the air entering the appliance is fresh and free from dust and smells.
This in turn ensures your wine does not absorb any unwanted odours.

Replace the active charcoal filters with new ones once a year (see "Cleaning and care"). These are available from Miele Dealer or the Miele Spare Parts Department.

Maximum freezing capacity

To ensure that fresh food placed in the freezer section freezes through to the core as quickly as possible, the maximum freezing capacity must not be exceeded. The maximum freezing capacity for freezing within a 24-hour period is given on the data plate: "Freezing capacity ....kg/24 hrs".

The maximum freezing capacity given on the data plate has been calculated according to DIN EN ISO 15502 Standard.

Freezing fresh food

Fresh food should be frozen as quickly as possible. This way the nutritional value of the food, its vitamin content, appearance and taste are not impaired.

Food which takes a long time to freeze will lose more water from its cells, which then shrink.
During the defrosting process, only some of this water is reabsorbed by the cells; the rest collects around the food.

If food is frozen quickly, the cells have less time to lose moisture, so they shrink less. As there is not so much moisture loss, it is easier for the food to reabsorb it during the defrosting process, and very little water collects around the defrosted food.

Storing frozen food

When buying frozen food to store in your freezer section, check

– that the packaging is not damaged,

– the use-by date,

– the temperature at which the frozen food is being stored in the shop. The length of time it can be kept is reduced if it has been stored at a temperature warmer than -18 °C.

■ Buy frozen food once you have finished the rest of your shopping, and wrap it in newspaper or use a cool bag or cool box to transport it.

■ Store it in the freezer as soon as possible.

Never re-freeze partially or fully defrosted food. Consume defrosted food as soon as possible as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.

Home freezing

Only freeze fresh food which is in a good condition.

Hints on home freezing

– The following types of food **are suitable** for freezing:
Fresh meat, poultry, game, fish, vegetables, herbs, fresh fruit, dairy products, pastry, leftovers, egg yolks, egg whites and a range of pre-cooked meals.

– The following types of food **are not suitable** for freezing:
Grapes, lettuce, radishes, sour cream, mayonnaise, eggs in their shells, onions, whole raw apples and pears.

– To retain colour, taste and vitamin C, vegetables should be blanched after they have been trimmed and washed.
To blanch: bring a large saucepan of water to the boil, immerse the vegetables in the fast boiling water for 2-3 minutes, depending on variety. Remove, and plunge into ice-cold water to cool quickly. Drain and pack ready for freezing.

– Lean meat freezes better than fatty meat, and can be stored for considerably longer.

– To prevent chops, steaks, cutlets or rolled meat from freezing together in solid blocks when packed, separate with a sheet of plastic freezer film.

– Do not season fresh foods or blanched vegetables before freezing. Only season cooked food lightly before freezing, but care should be taken as the taste of some spices alters when frozen.

– Do not place hot foods or drinks in the freezer. This causes already frozen food to thaw, and increases the energy consumption considerably. Allow hot foods and drinks to cool down before placing them in the freezer.

Packing

■ Freeze food in portions.

Unsuitable packing material
- wrapping paper
- grease-proof paper
- cellophane
- bin bags
- plastic carrier bags

Suitable packing material
- plastic freezer film
- freezer bags
- aluminium foil
- freezer containers

■ Expel as much air as possible from bags etc. before sealing them, to prevent freezer-burn on food.

■ Close the packaging tightly with
- rubber bands
- plastic clips
- string or bag ties
- freezer tape.

Freezer bags may also be sealed using home heat sealing kits.

■ Make a note of the contents and the date of freezing on the packaging.

Before placing food in the freezer section

- When freezing more than 2 kg of fresh food, switch on the Super freeze function for some time before placing the food in the freezer (see "Super freeze").
  This also helps to prevent food that is already in the freezer from starting to defrost.

Placing food in the freezer section

Food to be frozen can be placed anywhere in the freezer.

Large quantities should be placed directly on the glass cold plates to freeze the food quickly. To do this take out the freezer drawers, leaving the bottom drawer in the appliance. The lowest freezer drawer must always remain in the appliance.

When removing the top drawers, make sure that you do not block the ventilation slits in the back wall of the appliance. They are important for trouble-free operation of the appliance.

Each drawer and each of the glass cold plates can be loaded with a maximum of 25 kg.

- Place the food flat in the bottom of the freezer drawers or on the glass cold plates so that it freezes through to the core as quickly as possible.
- Make sure that the packaging and containers are dry to prevent them sticking together when frozen.

When freezing, make sure that food already frozen does not come into contact with fresh food being frozen as this could cause the frozen food to begin to defrost.

Freezing large items

If you wish to freeze large items such as a turkey or game, the glass cold plates between the drawers can be removed. To do this:

- Remove the freezer drawers and carefully slide out the glass cold plates.

Freezer calendar

The freezer calendar on the freezer drawer gives the length of time in months which various foods can be stored for effectively.

Where the storage time given on the packaging differs, follow the advice on the packaging.

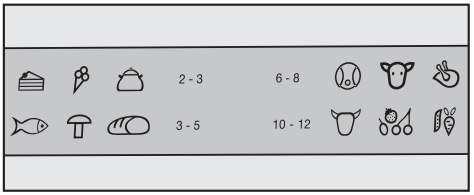

2-3 months:
Cakes, ice cream, stew

3-5 months:
Fish, mushrooms, bread

6-8 months:
Pork, veal, poultry

10-12 months:
Beef, fruit, vegetables

Defrosting

Frozen food can be defrosted in different ways:

– in a microwave oven,

– in an oven using the "Fan" or "Defrost" setting,

– at room temperature,

– in the refrigerator (the cold given off by the frozen food helps to keep the other food cold),

– in a steam oven.

Poultry It is particularly important to observe food hygiene rules when defrosting poultry. Do not use the liquid from defrosted poultry. Pour it away and wash the container it was in, the sink and your hands. Danger of salmonella poisoning.

Fruit should be defrosted at room temperature in its packaging, or in a covered bowl.

Most vegetables can be cooked while still frozen. Just put straight into boiling water or hot fat. The cooking time is slightly less than that of fresh vegetables due to changes in the cell structure.

Never re-freeze partially or fully defrosted food. Consume defrosted food as soon as possible as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.

Cooling drinks

When cooling drinks quickly, make sure bottles are **not left in the freezer for more than one hour**, as they could burst.

Freezer tray

The freezer tray is useful for freezing small items such as berries, herbs and vegetables. They can be frozen individually and therefore maintain their shape when defrosted.

■ Space the food out loosely on the tray.

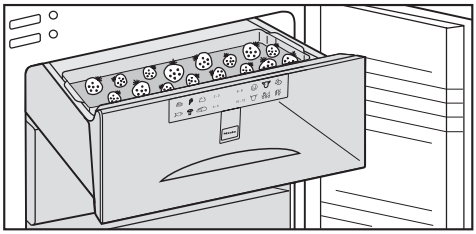

■ Hang the tray in one of the upper freezer drawers.

Leave the food for 10-12 hours to freeze thoroughly on the tray. Transfer it to a freezer bag or suitable container once frozen. Place the bag or container in the freezer drawer.

Cool pack

The cool pack prevents the temperature in the freezer rising too quickly in the event of a power cut.

Place the cool pack in the top drawer of the freezer section, directly on top of the food. The cool pack will be at its most effective after it has been in the freezer for approx. 24 hours.

If there is a power cut, place the cool pack directly on top of the frozen food in the top drawer so that the food will be kept cold for as long as possible.

When placing fresh food in the freezer, use the cool pack to separate the fresh food from the food which is already frozen so that the frozen food does not begin to thaw.

The cool pack can also be used in a cool bag to keep food or drinks cool for a short period of time.

For the automatic ice cube maker to operate it must be connected to the mains water supply.

Switching on the ice cube maker

- Switch on the freezer section.
- Open the top left drawer a little.

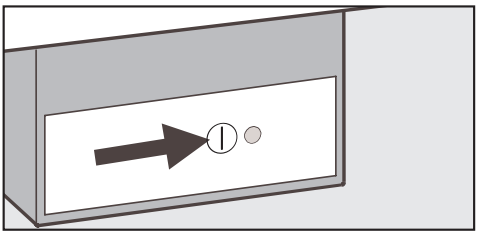

- Press the On/Off button on the ice cube maker. The indicator light will come on.
- Close the drawer.

The drawer must be completely shut for ice cubes to be produced.

After the appliance is switched on for the first time it can take up to 24 hours for the first ice cubes to drop out of the ice cube maker and collect in the drawer.
Thereafter, when the ice cube maker is switched off and then on again it will take up to a maximum of 6 hours for ice cubes to be produced.

To ensure that the water pipes are thoroughly flushed through before use, ice cubes from the first three ice cube making processes must not be consumed.
This applies not only to when the appliance is installed for the first time but also if the appliance has been out of use for a longer period (e.g. whilst on holiday).

Making a large amount of ice cubes

The amount of ice cubes which the appliance makes depends on the temperature in the freezer section. The lower the temperature, the more ice cubes are produced within a certain time frame.

Ice cube production is halted automatically as soon as the ice cube drawer is full.

If you require a large amount of ice cubes,

- replace the full ice cube drawer with the drawer beside it on the right.

The ice cube maker will begin to produce ice cubes again as soon as this new drawer has been placed in position and closed properly.

Switching off the ice cube maker

The ice cube maker can be switched off independently of the freezer section if you do not want the appliance to make any ice cubes.

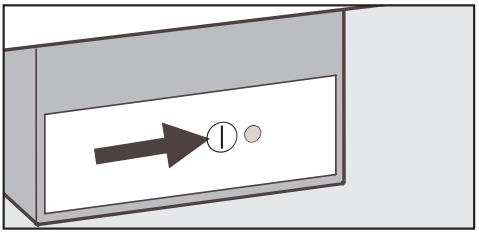

- Press the On/Off button on the ice cube maker until the indicator light goes out.

If the ice cube maker is switched off, the ice cube drawer can be used as an extra drawer for freezing fresh food and storing frozen food.

Clean the ice cube tray if the ice cube maker is going to be switched off for a long period of time.

Setting the water intake time for the ice cube maker

The size of the ice cubes produced depends on the water pressure present and the water intake time which has been set for the ice cube maker.

If the ice cube maker is only producing small ice cubes the water pressure is low. In order to produce larger ice cubes, the water intake time for the ice cube maker needs to be prolonged.

- Switch the ice cube maker on.

- Touch and leave your finger on the ∨ sensor.

- At the same time, briefly touch the On/Off sensor (without letting go of the ∨ sensor).
- Leave your finger on the ∨ sensor for another 5 seconds until c appears in the display.
- Touch the ∨ sensor repeatedly until 2 appears in the display.
- Touch the On/Off sensor.
- Touch the ∨ sensor repeatedly until 2 2 appears in the display.
- Touch the On/Off sensor.

- The length of the water intake time for the ice cube maker can now be adjusted by touching the ∨ sensor:
  E 1: Shortest water intake time,
  E 8: Longest water intake time,
  E – : Return to menu.

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm the new setting.
- Touch the ∨ sensor repeatedly until 2 – appears in the display.
- Touch the On/Off sensor.
- Touch the ∨ sensor repeatedly until c appears in the display.
- Touch the On/Off sensor.

You have now left the settings mode.

Wine conditioning zones

The wine conditioning zones defrost automatically.

Condensate and frost can build up on the back wall of the wine conditioning zones whilst they are in use. These are automatically removed and defrosted by the appliance.

Ensure that the condensate channel and drain hole are kept clean and are never blocked so that condensate can flow away without hindrance.

Freezer section

This appliance is equipped with a "Frost free" system. The freezer section defrosts automatically.

The moisture generated in the appliance collects on the condenser and is automatically defrosted and dissipated by the condenser from time to time.

This automatic defrosting system enables the freezer section to remain permanently ice-free, however, the food stored in the freezer section will not defrost.

- A range of Miele branded cleaning agents is available from the Miele Spare Parts Department, or via the internet at www.miele-shop.com.

Never use cleaning agents containing abrasive substances such as sand, soda, acids, chlorides or chemical solvents. "Non-abrasive" cleaning agents are also unsuitable as they can cause matt areas to appear.

For stainless steel surfaces use a stainless steel conditioning agent.

Do not let water get into the controls, the lighting or the ventilation gaps.

Do not let water get into the drainage channel and drain hole when cleaning.

Do not use steam cleaning apparatus to clean the appliance. Steam could reach the electrical components and cause a short circuit.

The data plate located inside the appliance must not be removed. It contains information which is required in the event of a service call.

Before cleaning

- Switch the appliance off, switch off at the socket and remove the plug.
- Take any wine bottles and frozen food out of the appliance and store in a cool place.
- Take out any removable parts, e.g. shelves, for cleaning.

Cleaning the outer casing, the interior and accessories

- Clean the appliance at least once a month. Clean all parts by hand. Do not wash in a dishwasher.
- Clean the interior with a solution of lukewarm water and a little washing-up liquid.
- Wipe the wooden shelves with a dry, fluff-free cloth. Do not clean the wooden shelves with water.
- Clean the condensate channel and drain hole in the wine conditioning zones frequently, so that condensate can drain away unhindered. Use a straw or similar to clear the drain if necessary (see "Cleaning the condensate drain hole").
- After cleaning, wipe the outer casing, the interior and accessories with a damp cloth and dry with a soft cloth. Leave the doors open to air the appliance for a short while.
- Stainless steel surfaces can be cleaned with a proprietary stainless steel cleaning agent, following the manufacturer's instructions on the packaging.
- After cleaning, stainless steel surfaces should be treated with a conditioning agent for stainless steel.

It is important to do this every time the stainless steel surfaces are cleaned, as the stainless steel conditioner protects the surfaces and helps prevent re-soiling.

Cleaning the condensate drain hole

- Remove the wooden shelves from the wine conditioning zones.
- Unscrew the runners at the right and left.

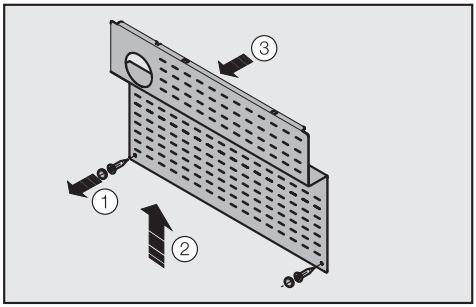

- Take off the cover caps and undo the screws on the metal cover ①.
- Lift up the metal cover ② and remove it by pulling it forwards ③.
- Clean the drain hole using a cotton bud.
- After cleaning, refit the metal covers and the runners and replace the wooden shelves.

Cleaning the ice cube tray

The ice cubes are formed in a tray before they are dropped down into the drawer.

This tray should be cleaned regularly to remove any stale ice or water.

- Connect the appliance to the electricity supply.
- Open the top left drawer a little.
- Press the On/Off button on the ice cube maker. The indicator light will come on.
- Empty the ice cube drawer.
- Press the On/Off button on the ice cube maker and hold it pressed in for approx. 10 seconds (after about a second, the ice cube maker will switch off and the indicator light will go out).

The indicator light will flash.

- Push the ice cube drawer in as far as it will go within the next 60 seconds.

The ice cube tray will then rotate into an angled position which makes it easier for cleaning:

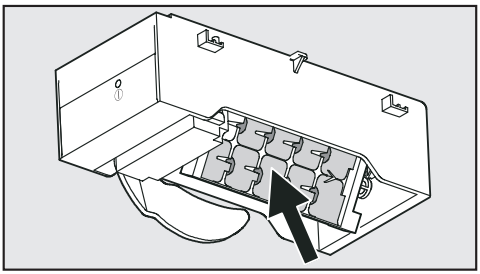

- Wait until the ice cube tray has completed this rotation before continuing.
- Then take the ice cube drawer out of the appliance and clean it.
- Now clean the ice cube tray with hot water and a little washing-up liquid or sterilising fluid. Rinse thoroughly afterwards.
- Press the On/Off button on the ice cube maker.
- Then put the ice cube drawer back in the appliance and close it.

The ice cube tray will return to its original position.

The ice cube maker will begin to produce ice cubes again after a maximum of 6 hours.

If the ice cube maker has not been used for a while, it is important to clean the ice cube tray before using it again.

If you have used a solution of water and washing-up liquid to clean it, discard the ice cubes from the first three ice cube making processes, as they are not suitable for consumption.

Ventilation gaps

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner. A build-up of dust will increase the energy consumption of the appliance.

Door seals

Do not use any grease or oil on the door seals as these will cause them to deteriorate and become porous over time.

The door seals should be cleaned regularly with clean water and then wiped dry with a soft cloth.

Metal grille at the back of the appliance

The metal grille at the back of the appliance (heat exchanger) should be dusted at least once a year. A build-up of dust will increase the energy consumption of the appliance.

When cleaning the grille, make sure that the pipework and other components do not get broken or damaged in any way.

After cleaning

- Put the wooden shelves back in the wine conditioning zones.
- Put the wine bottles back in the wine conditioning zones and close both the appliance doors.
- Insert the plug in the socket and switch the appliance back on.
- Switch on the Super freeze function so that the freezer section can cool down quickly.
- Once the temperature in the freezer section has reached the required temperature place the food back in the freezer drawers and place them back in the freezer section.
- Switch off the Super freeze function as soon as the temperature in the freezer is a constant -18 °C or colder.

Active charcoal filters

The active charcoal filters should to be changed approx. every 12 months.

When the Change active charcoal filter indicator lights up red, the active charcoal filter in each of the wine conditioning zones need to be changed.

To change the active charcoal filters

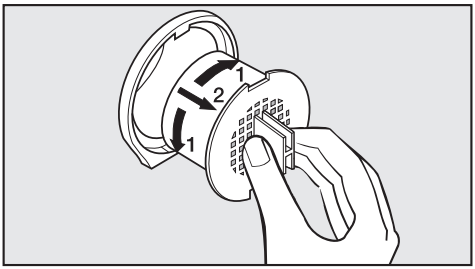

- Turn the filter 90° clockwise or anti-clockwise.
- Remove the filter.
- Insert a new filter with the handle in the vertical position.
- Turn the filter 90° clockwise or anti-clockwise until it clicks into position.
- Active charcoal filters can be obtained form your Miele dealer or the Miele Spare Parts Department.

To confirm the filters have been changed

- Touch the Change active charcoal filter indicator for approx. 2 seconds.

The indicator light will go out, and the counter will be reset.

To delay changing the active charcoal filters

If you do not have new active charcoal filters, you can order them from your Miele dealer or from the Miele Spare Parts Department.

You can switch off the Change active charcoal filter indicator early, if you would prefer not to have the red indicator showing.

- Touch the Change active charcoal filter indicator for approx. 2 seconds.

The Change active charcoal filter indicator will go out.

If you have delayed changing the active charcoal filters and the indicator is not lit up, you will need to reset the counter when you replace the active charcoal filters via the settings mode.

- Touch and leave your finger on the ∨ sensor.

- At the same time, briefly touch the On/Off sensor (without letting go of the ∨ sensor).
- Leave your finger on the ∨ sensor for another 5 seconds until c appears in the display.
- Touch the ∨ sensor repeatedly until h appears in the display.
- Touch the On/Off sensor.
- Touch the ∨ sensor repeatedly until h 2 appears in the display.
- Touch the On/Off sensor for approx. 2 seconds to confirm.

The counter is now reset.

- Touch the ∨ sensor repeatedly until c appears in the display.
- Touch the On/Off sensor.

You have now left the settings mode.

Repairs to electrical appliances should only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

What to do if . . .

. . . the wine conditioning zones or the freezer section do not get cool.

- Check whether the relevant zone or section is switched on. The temperature display must be lit up.
- Check that the plug is correctly inserted into the socket and switched on.
- Check that the fuse is not defective and that the mains fuse has not tripped. If it has, contact the Miele Service Department.

. . . the door to the freezer section will not open because it has been opened and closed too many times in succession.

This is not a fault. The suction caused by opening and closing the door is preventing the door from opening. Wait a few minutes and then try again. It should now open without force.

. . . the temperature in the wine conditioning zones or freezer section is too low.

- Select a warmer temperature.
- Check that the doors have been closed properly.
- Has a large amount of fresh food been put in at the same time for freezing.
  This makes the compressor run for longer, causing the temperature to fall automatically.
- Super freeze has not switched itself off.

. . . the compressor is switching in too frequently and for too long.

- Check whether the ventilation gaps have been covered over or become dusty.
- Check whether the metal grille (heat exchanger) at the back of the appliance has become too dusty.
- The doors have been opened too frequently, or a large amount of fresh food has been put in at once for freezing.
- Check that the doors have been closed properly.

. . . food has frozen together.

Use a blunt instrument, e.g. a spoon handle or plastic scraper, to prise it apart carefully.

. . . the frozen food is thawing because the freezer section is too warm.

- Is the room temperature lower than the ambient temperature for which the appliance is designed?

  If so, raise the temperature of the room.

Operating in a room which is too cold will cause the cooling system to switch off for too long, causing the freezer section to become too warm.

. . . the alarm sounds and the alarm off sensor is flashing.

The wine conditioning zones are too warm or too cold in relation to the set temperature or the freezer section is too warm in relation to the set temperature because

- the doors have been opened too frequently, large amounts of fresh food have been put in at once for freezing or many bottles of wine have been placed in the appliance.
- the ventilation gaps are blocked.

Once the problem has been resolved and the correct temperature has been reached, the alarm indicator will go out and the alarm will stop.

. . . bars light up in the temperature displays.

Check the temperature displays about 6 hours after switching on the appliance. The display will not show a temperature until the temperature in the appliance has reached a certain level.

. . . "_F" appears in the temperature display.

There is a fault. Call the Service Department.

. . . the Change the active charcoal filter indicator is red.

- Replace the active charcoal filters.

You can order replacement filters via your Miele dealer or the Miele Spare Parts Department.

. . . "*nA*" appears in the temperature display.

The temperature has risen too high at some point during the last couple of days because of a power cut.

- Touch the alarm off sensor whilst "*nA*" is lit up in the display.

  The temperature display will show the warmest temperature recorded in the freezer section during the power cut.

Depending on the temperature displayed, you should check the condition of food in the freezer. If food has defrosted or started to defrost, check that it is still safe to use, and if so, use it as quickly as possible. Defrosted food may only be re-frozen after it has been cooked.

The warmest temperature will show in the display for about 1 minute. The current temperature in the freezer will then show in the display again.

. . . "*dn*" appears in the temperature display.

The demonstration function is activated.

- Call the Service Department.

. . . you cannot switch the ice cube maker on.

- Check whether the appliance is connected to the electricity supply.

. . . the ice cube maker is not producing any ice cubes.

- Was the water inlet pipe purged of air by a qualified and competent person before the appliance was used for the first time?
- Check whether the ice cube maker is switched on.
- Check whether the freezer section is switched on.
- Check whether the water inlet is open.
- Check that the ice cube drawer has been closed properly.
  It can take up to 24 hours to produce the first ice cubes.

. . . the ice cube maker is only producing small ice cubes.

The size of ice cubes which are produced over a certain period of time will depend on the water pressure present.

If the ice cube maker is only producing small cubes of ice this means that the water pressure is low.

- Lengthen the water intake time for the ice cube maker (see "Making ice cubes").

. . . the indicator light on the ice cube maker is flashing.

There is a fault. Call the Service Department.

. . . you cannot switch the appliance off.

The safety lock has been activated.

. . . the interior lighting is not working.

- Was the door left open for too long? The lighting switches itself off automatically after approx. 15 minutes if the door is left open.

If this is not the case, then the interior lighting is defective.

- Call the Service Department.

The LED lighting may only be repaired or changed by a service technician. Danger of injury and damage.

Should the cover be damaged or need to be removed due to damage, **exercise caution.** Never look at the lighting with optical instruments (magnifying glass or similar).

. . . mildew has begun to form on the wine bottle labels.

Mildew can begin to form on the labels, depending on the type of adhesive used.

- Wash the wine bottles and remove any adhesive residue.

. . . the floor of the lower wine conditioning zone is wet.

The condensate drain hole is blocked.

- Clean the condensate channel and drain hole.

If you still cannot remedy the fault having followed these suggestions, please contact the Miele Service Department.

To prevent unnecessary loss of temperature it is advisable not to open the doors while waiting for the appliance to be serviced.

Noises

Normal noises	What causes them
Brrrrr...	Humming noise made by the motor (compressor). This noise can get louder for brief periods when the motor is switching on.
Blubb, blubb....	A gurgling noise can be heard when coolant is circulating through the pipes.
Click....	Clicking sounds are made when the thermostat switches the motor on and off.
Sssrrrrr....	On multi-zone and frost-free appliances you can sometimes just hear the movement of air circulating inside the appliance.

Remember that the noise of the compressor and the coolant circulating in the system is unavoidable.

Noises that you can easily rectify	What causes them, and what can you do about them?
Rattling, vibrating	**The appliance is uneven:** Realign the appliance using a spirit level, by raising or lowering the screw feet underneath the appliance.
	The appliance is touching another appliance or piece of furniture: Move it away.
	Drawers, baskets or shelves are unstable or sticking: Check all removable items and refit them correctly.
	Are any bottles or containers unstable or knocking against each other? Separate them.
	The transport cable clips are hanging loose at the back of the appliance: Remove the clips.

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

– your Miele Dealer

or

– Miele
(see back cover for contact details).

When contacting your Dealer or Miele, please quote the model and serial number of your appliance. This information is given on the data plate inside your appliance.

Please note that telephone calls may be monitored and recorded for training purposes.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See back cover for contact details.

In the U.K. your appliance is guaranteed for 2 years from the date of delivery. However, you must activate your cover by calling 0845 365 6640 or registering online at www.miele.co.uk.

Notes on connecting to the mains water supply

Connection to the mains water supply should only be carried out by a qualified and competent person in accordance with national and local regulations.

The water quality must conform to the requirements for drinking water in the country the appliance is being installed in.

– This appliance complies with IEC 61770 and EN 61770 (ATS 5200.101 in Australia).

– All items used for connecting the appliance to the mains water supply must comply with the current national and local safety regulations in the country in which the appliance is being installed.

– The appliance is only suitable for connection to the cold water supply.

– The water pressure (flow rate) must be between 1.5 and 6 bar.

– The stainless steel hose is 1.5 m long. This may only be lengthened by means of a Miele extension hose. This extension hose is available from the Miele Spare Parts Department and must only be fitted by a suitably qualified fitter.

– A stopcock must be provided between the stainless steel hose and the household water supply to ensure that the water supply can be cut off if necessary.

The stopcock should be easily accessible after the appliance has been built-in.

Connection to the water inlet

Before making plumbing connections, ensure the appliance is disconnected from the mains electricity supply.

Connection to the mains water supply should incorporate a mains stopcock with $^{3}/_{4}$" thread.

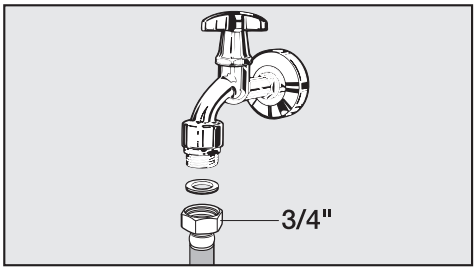

■ Connect the stainless steel hose to the stopcock.

■ Ensure that it is screwed into position correctly.

Before using the appliance for the first time the water inlet pipe should be purged of air by a qualified and competent person.

– To do so the stainless steel hose should be filled as far as possible with water before being connected to the solenoid valve.

– Mop up any spillages with a cloth.

- The stainless steel hose should be attached to the solenoid valve at the base of the appliance at the back.
- Ensure that the hose is fitted correctly and that it is water tight.
- Turn on the stopcock slowly and check the whole water system for leaks.
- The appliance can then be connected to the electricity supply.
- Push the appliance into its final position.

When doing so, make sure that the stainless steel hose is not kinked or damaged.

After a maximum of 24 hours the first ice cubes will drop out of the ice cube maker and collect in the drawer.

Electrical connection IRL, U.K., ZA

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7671 in the UK).

The appliance is supplied with a mains cable and moulded plug ready for connection to an a.c. single phase 220-240 V 50 Hz supply.

Please ensure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible. For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100, Section 739).

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

The appliance must not be connected to an inverter and must not be used with a plug adapter as these can cause damage to the appliance's electronic unit.

Non-rewireable plugs (BS 1363)

The fuse cover must be re-fitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words in the base of the plug (as applicable to the design of the plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

WARNING
THIS APPLIANCE MUST BE EARTHED

All electrical work should be carried out by a suitably qualified and competent person in accordance with local and national safety regulations.

The appliance is supplied with a mains cable and moulded plug ready for connection to 220-240 V 50 Hz supply.

The voltage and frequency are given on the data plate. Please ensure that these match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible. For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA.

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

The appliance must not be connected to an inverter and must not be used with a plug adapter as these can cause damage to the appliance's electronic unit.

WARNING
THIS APPLIANCE MUST BE EARTHED

Do not place any appliance which gives off heat, such as a toaster or microwave oven, on top of this appliance, as this would increase the appliance's energy consumption.

This appliance has side-wall heating and can be installed side-by-side with another refrigeration appliance. Please ask your supplier for details of suitable appliances.

Location

This appliance should be installed in a dry, well-ventilated room. It should not be installed where it is exposed to direct sunlight or directly adjacent to a heat-producing appliance such as an oven or a radiator. The room temperature should not go above or below the climate range for which the appliance is designed. The higher the ambient temperature of the room, the more energy the appliance requires to operate.

Important: tropical / humid environments
During periods of high humidity, some condensation may appear on outside surfaces of cooling appliances. This condensation will disappear when humidity levels drop. For prevention, it is advisable to install the appliance with sufficient ventilation in a dry and/or an air-conditioned room. Please ensure that doors are closing and sealing properly. Please ensure that the appliance is installed in accordance with these installation instructions and that the handle is fitted correctly. Should you require further assistance please contact your Miele customer service centre.

Climate range

The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range of the appliance is stated on the data plate inside the appliance.

Climate range	Ambient room temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C
SN-ST	+10°C to +38°C
SN-T	+10°C to +43°C

Operating in a room which is too cold will cause the cooling system to switch off for too long, causing the internal temperatures in the appliance to rise with the risk of frozen food deteriorating and going off.

Ventilation

Air at the back of the appliance gets warm. To ensure sufficient ventilation the air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.

Installation

- Remove the cable clip from the back of the appliance.
- Check that all parts at the back of the appliance are unhindered. Carefully remove any hindrance.
- Carefully push the appliance into position with its back against the wall.

Aligning the appliance

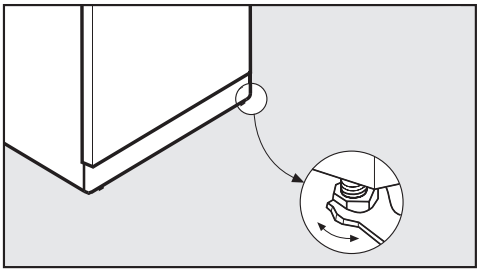

- To align the appliance, adjust the feet using the spanner supplied.

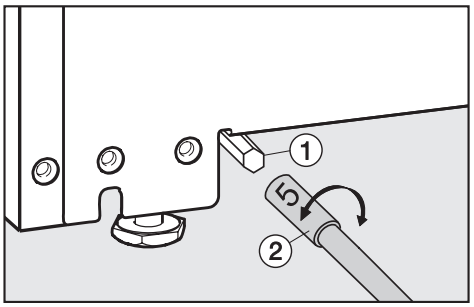

- If necessary, also align the two rear adjusting devices ① using a socket wrench ②.
  Turn the adjusting device clockwise to raise the appliance up at the back.

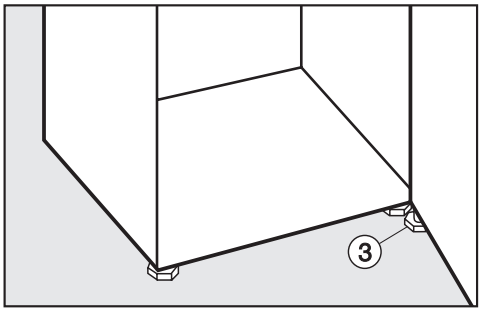

- Unscrew foot ③ from the hinge plate, to level the appliance door.

Appliance dimensions

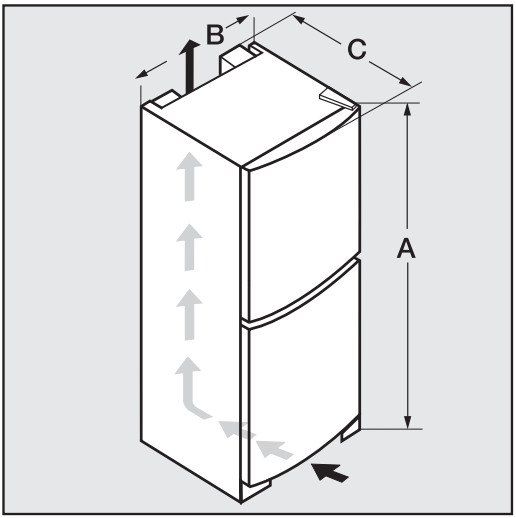

	A	B	C
KWTN 14826 SDE ed	1852 mm	600 mm	630 mm

To avoid a build-up of condensation and resultant damage, refrigerators and freezers should not normally be installed side-by-side.
However, this appliance has side wall heating, and can be installed side-by-side with certain other Miele appliances.

Your dealer will be able to advise you on which models are suitable.

Installation

- This appliance must be installed to the left of any refrigerator when viewed from the front. The side wall heating in the right-hand wall is designed to prevent the build-up of condensation between the two appliances.
- Place the two appliances as close as possible to their final position so that they can be aligned for any unevenness in the floor. The backs of the appliances still need to be kept accessible to complete the installation.

Joining the two appliances together

You will need a spirit level, spanners, a torque screwdriver and a socket wrench.

- Before starting, peel off any protective foil from the appliance casing.
- Place the appliances next to one another so that the fronts are aligned, leaving a gap of 10 mm between them.

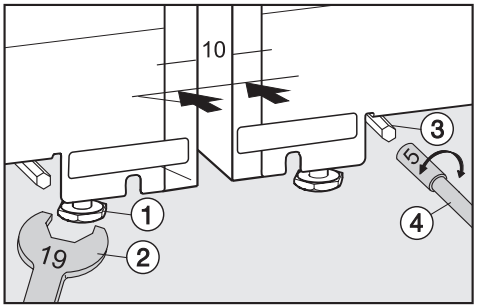

- Align both appliances using a spirit level.

– Align front feet ① using a spanner ②.

– Align the back feet using adjusting device ③ and socket wrench ④. Turn the adjusting device clockwise to raise the appliance up at the back.

Installing in a side-by-side combination

- Close the doors to check whether the door handles are correctly aligned with one another.

The top of both appliances must be the same height. If they are not, the covers will not fit properly.

- Push the two appliances together, and align them again.

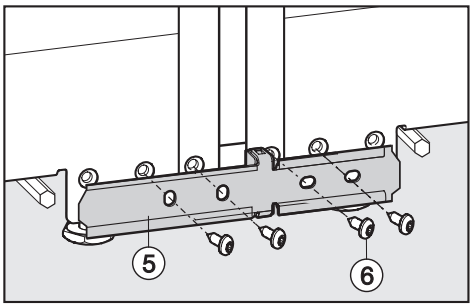

- Remove covers from both appliances.
- Screw lower bracket ⑤ securely into position using screws ⑥.

Do not move the appliances until all the brackets are securely fitted.

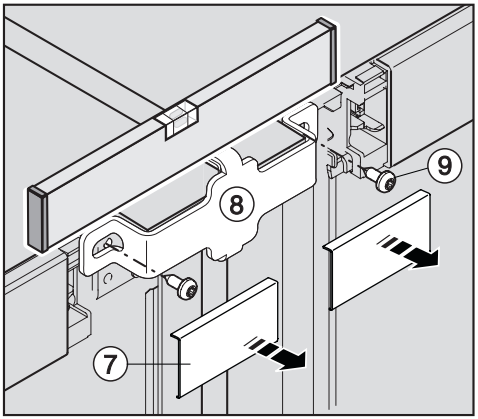

- Remove covers ⑦ from both appliances.
- Loosely screw large bracket ⑧ into position on the front at the top using long screws ⑨.
  Make pilot holes for the screws if necessary or use a battery powered screwdriver.
- Push the two appliances together, and align them again.
- Now tighten screws ⑨.

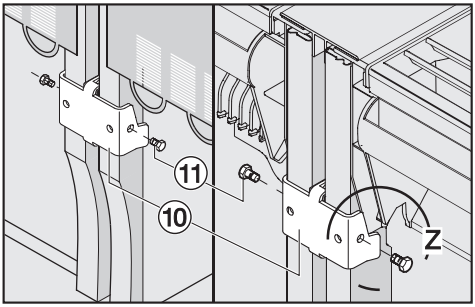

- Position wide brackets ⑩ at the top and bottom on the back, and push the top bracket upwards until it is in the correct position (z).
- Secure the brackets at the sides using hex screws ⑪ supplied. **Do not** drill holes for these screws in the appliance.

To avoid vibrations, neither the brackets nor the screws should touch the pipework on the backs of the appliances.

- Connect both appliances to the electricity supply as described under "Electrical connection".
- Carefully push the two appliances back into their final position. It is easier if you raise the appliances at the front, and roll them back on their rear rollers.

The height of the appliances can be aligned again if necessary.

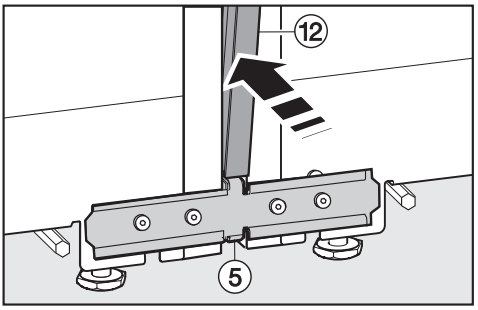

- Position the long stainless steel trim ⑫ in the gap, making sure that it is located above bracket ⑤.

Pressing both ridges along the trim together as you do so makes it easier to fit the trim into the gap.

- Carefully work the stainless steel trim into the gap. Use a soft cloth to do this to avoid denting the trim.
- Carefully remove the protective foil from the stainless steel trim.

Installing in a side-by-side combination

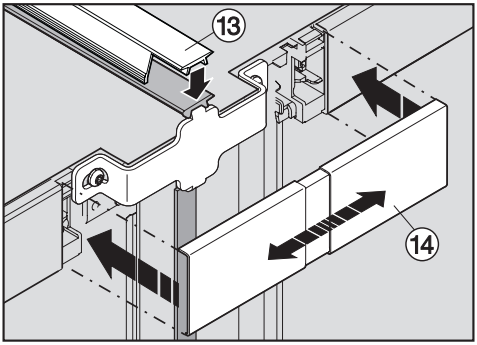

- Push short trim ⑬ into the gap at the top of the appliances. Make sure that the gap in the trim faces the front. The trim must sit flush with the top of the appliances at the front.
- Fit cover ⑭ in the space between the control panels. Make sure that the outer edges of the cover are flush with the control panels. The cover can be pulled out to adjust it to the right size.
  The gap in the cover must face downwards to fit properly over the long stainless steel trim.

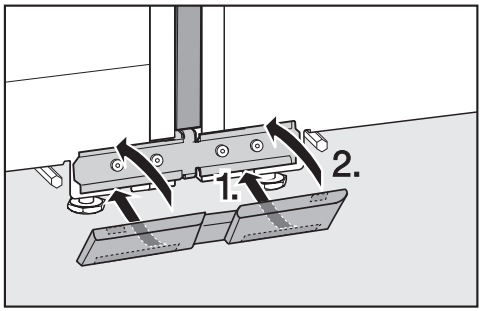

- Refit cover.

Please align the handles on both doors if necessary. See "Changing the door hinging".

To change the door hinging you will need the following tools:

– a cross-slotted screwdriver,

– a flat-bladed screwdriver,

– a selection of Torx screwdrivers,

– a spanner.

Two people are needed for changing the door hinging.

Removing the door handles:

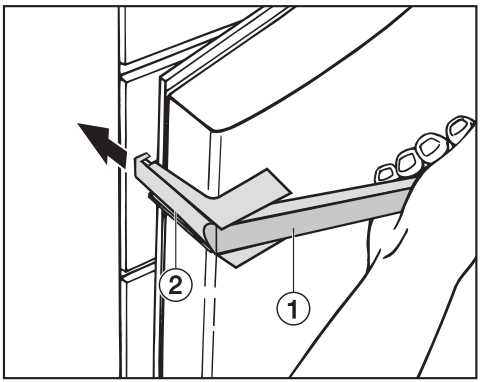

- Pull door handle ① towards you. Side section ② slides back.
- Pull side section ② out of the guides on the mounting plate.
- Undo the 4 screws (Torx 15) in the mounting plate, and remove the handle.
- Remove the cover caps from the opposite side, and fit them into the empty holes.

Changing the door hinging

Removing the soft-close mechanism for the upper door:

■ Open the upper door.

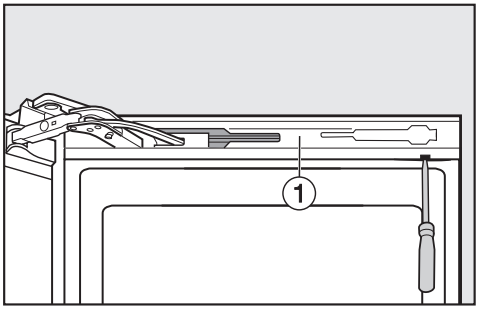

■ Prise open ① from the soft-close mechanism by inserting a flat-bladed screwdriver into the gap from above and easing it off bit by bit.

Take care not to damage the door seal.
If the door seal becomes damaged, the door will no longer close properly and cooling will be impaired.

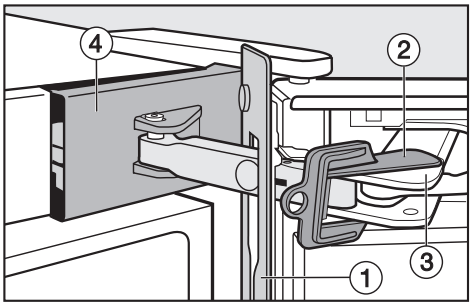

■ Slide panel ① towards the appliance, and leave it hanging between the door and the appliance.

■ Fit restraining clip ② (supplied with the appliance) onto soft-close mechanism ③.

The restraining clip stops the hinge from snapping shut. Do not remove the clip until told to do so.

■ Carefully prise open ④ from above and below using a flat-bladed screwdriver.

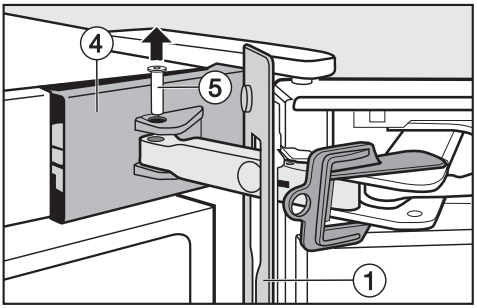

■ Push hinge pin ⑤ up and out from underneath using a flat-bladed screwdriver.

■ Remove cover ④.

The soft-close mechanism is now no longer fixed to the appliance.

■ Remove panel ①.

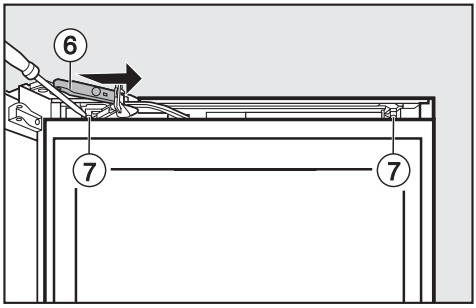

- Slide soft-close mechanism bracket ⑥ as far as it will go towards the handle side of the door, and undo screws ⑦ on the soft-close mechanism.
- Using a flat-bladed screwdriver, slide the soft-close door mechanism towards the handle side of the door, and lever it out at the side.
- Then place it to one side.

Removing the upper door:

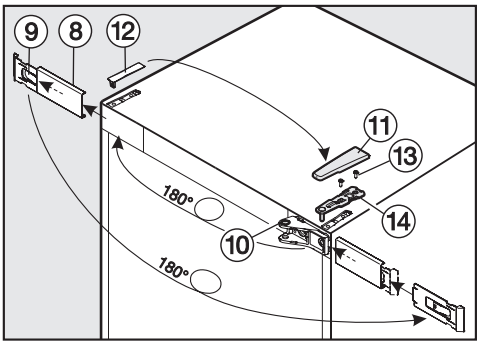

- Gently loosen cover ⑧ by carefully inserting a flat-bladed screwdriver into the gap.
- Remove cover ⑧ together with retainer ⑨.
- Then separate retainer ⑨ from cover ⑧, by pushing it slightly to the left and then pulling the cover forwards and off.
- Rotate ⑨ by 180°.
- Then fit cover ⑧ from the front over retainer ⑨, and push it over to the right. The writing must be visible.
- Unscrew hinge part ⑩, turn through 180° and fit to the opposite side. If necessary drill pilot holes for the screws.
- Remove cover ⑪ by sliding it forwards from the back and then lifting it off.
- Remove cover ⑫ by pulling it upwards.

Changing the door hinging

Caution. The upper door is not secure as soon as the upper hinge plate is removed.

- Close the upper door.
- Undo screws ⑬ in upper hinge plate ⑭ and pull it upwards and off.
- Carefully lift the upper door off and place it to one side.
- Make sure that you leave the hinge pin in the hinge plate in the middle of the appliance, as otherwise the lower door will be unsecured.
- Then fit cover ⑧ together with retainer ⑨ on the opposite side.
- Refit cover ⑫ on the opposite side.

Removing the lower soft-close door mechanism:

- Open the lower door.

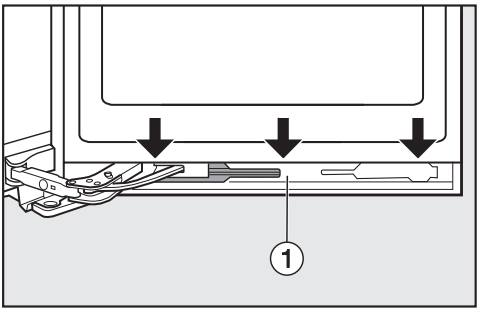

- Prise open ① from the soft-close mechanism by inserting a flat-bladed screwdriver into the gap from above and easing it off bit by bit.

Take care not to damage the door seal.
If the door seal becomes damaged, the door will no longer close properly and cooling will be impaired.

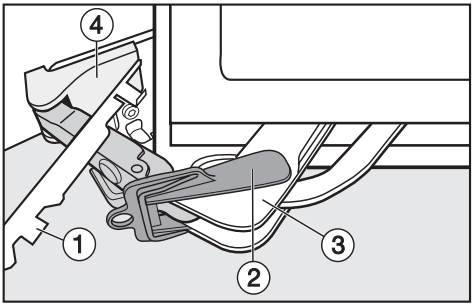

- Slide panel ① towards the appliance, and leave it hanging between the door and the appliance.
- Fit restraining clip ② (supplied with the appliance) onto soft-close mechanism ③.

The restraining clip stops the hinge from snapping shut. Do not remove the clip until told to do so.

- Carefully remove cover ④ from the side using a flat-bladed screwdriver.
- With the help of another person, tip the appliance back slightly.

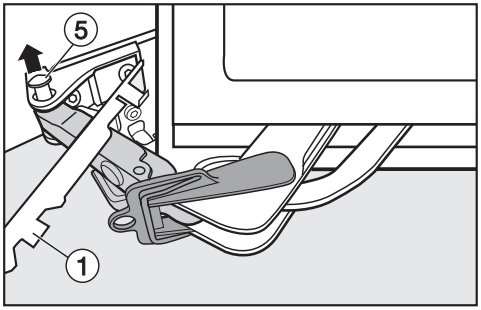

- Push hinge pin ⑤ up and out from underneath.

The soft-close mechanism is now no longer fixed to the appliance.

- Remove panel ①.

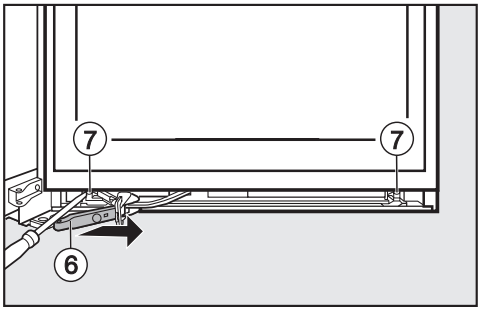

- Slide soft-close mechanism bracket ⑥ as far as it will go towards the handle side of the door, and undo screws ⑦ on the soft-close mechanism.
- Using a flat-bladed screwdriver, slide the soft-close door mechanism towards the handle side of the door, and lever it out at the side.
- Then place it to one side.

Removing the lower door:

- Close the lower appliance door.

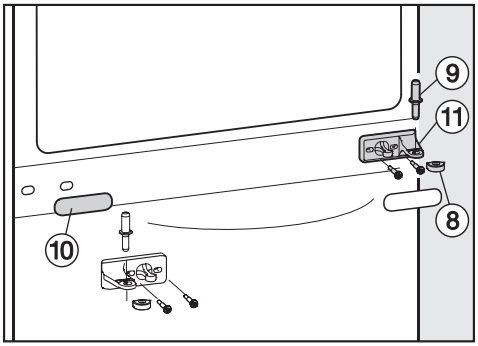

- Pull the middle hinge pin ⑨ upwards to remove it.
- Carefully lift the lower door off and place it to one side.
- Pull cover ⑩ off.
- Unscrew hinge plate ⑪, turn it through 180° and fit it on the opposite side.
- Turn plastic cover ⑧ 180° and refit it in the centre of hinge plate ⑪.
- Refit cover ⑩ on the opposite side.

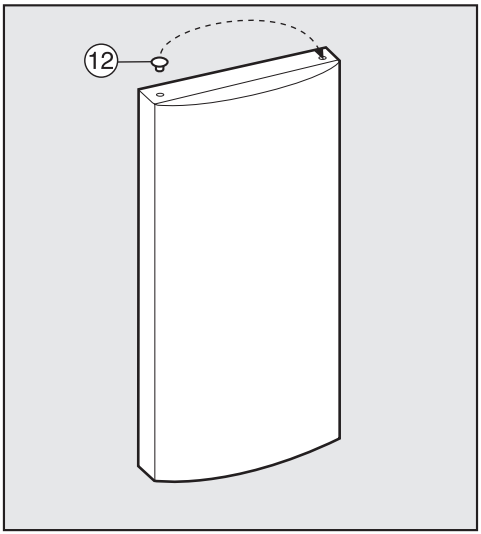

- Remove cap ⑫ from the bush in the door and refit on the opposite side.

Refitting the lower door:

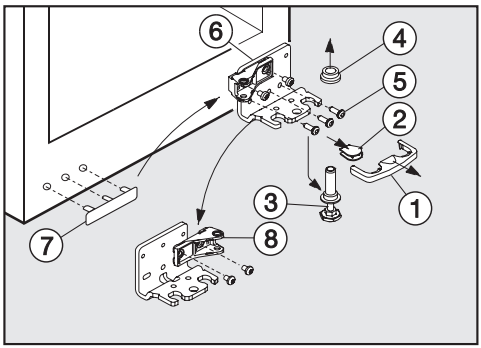

- Remove cover ① by pulling it forwards.
- Pull cover ② off.
- Screw foot ③ into hinge pin as far as it will go.
- With the help of another person, carefully tilt the appliance backwards and pull hinge pin ③ out.
- Take care not to lose hinge bush ④.
- Undo screws ⑤ and take hinge plate ⑥ off.
- Remove cover ⑦ and refit on the opposite side.
- Refit hinge plate ⑥ onto the other side using the 2 **outer** screws. To make it possible to align the door later, do not replace the **centre** screw at this stage.
- Unscrew part ⑧ from hinge plate ⑥, rotate it by 180° and refit into the hole on the opposite side of the hinge plate.
- Refit cover ② on the opposite side.
- With the help of another person, carefully tip the appliance back and refit hinge pin ③ from below into hinge plate ⑥. The notch at the bottom of the hinge plate should face forwards.
- Replace hinge bush ④ on hinge pin ③.
- Refit cover ①.
- Place the lower door onto hinge pin ③ from above.
- Close the lower appliance door.

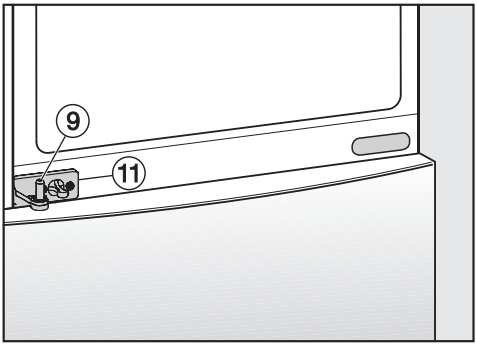

■ Fit hinge pin ⑨ into middle hinge plate ⑪ in the lower door.

Replacing the lower soft-close door mechanism:

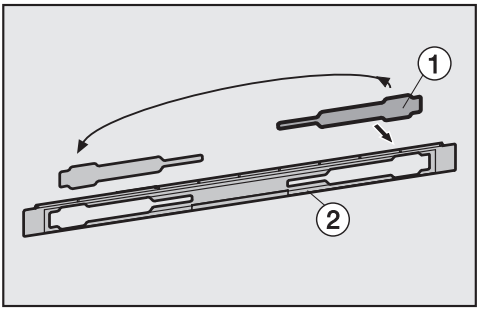

■ Remove cover ① from panel ②, rotate it by 180° and refit it on the other side.

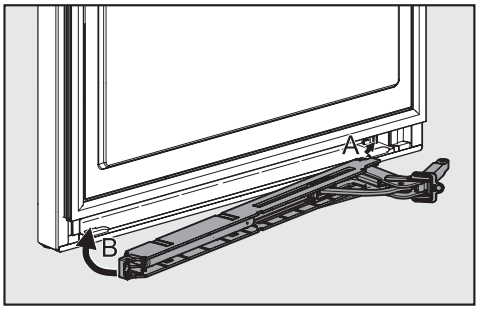

■ Insert the soft-close mechanism back into the door, starting at the right hand side.

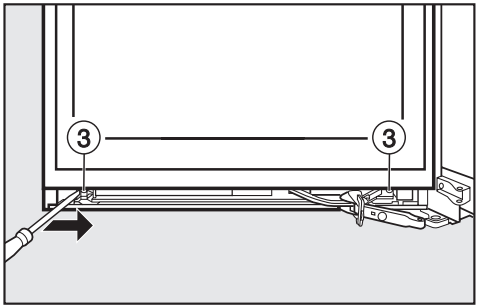

■ Slide the soft-close mechanism back into the door as far as it will go towards the appliance using a flat-headed screwdriver.

The screw holes on the left and right must line up perfectly.

■ First screw the soft-close mechanism onto the appliance side, then onto the handle side ③, pushing it firmly towards the appliance.

Changing the door hinging

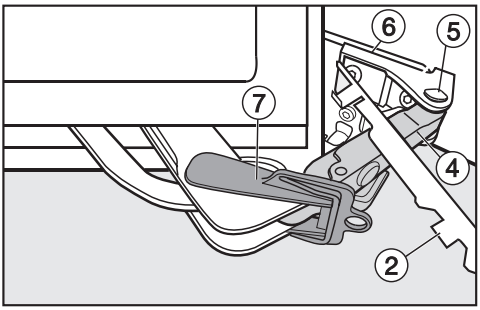

- Attach panel ② to soft-close mechanism bracket ④.
- Align bracket ④ to the hinge plate, and insert pin ⑤ from above so that the right angle fits into the recess.
- Click cover ⑥ back into place.

Make sure that cover ⑥ fits properly so that the door can be closed without hindrance and the pin is protected.

- Remove retaining clip ⑦.

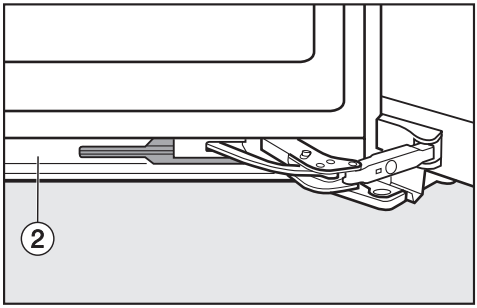

- Replace panel ② onto the soft-close mechanism from above, clicking it back into place first at the bottom and then at the top.
- Close the lower appliance door.

Refitting the upper door:

- Then fit the top door on middle hinge pin ⑨.
- Close the upper door.

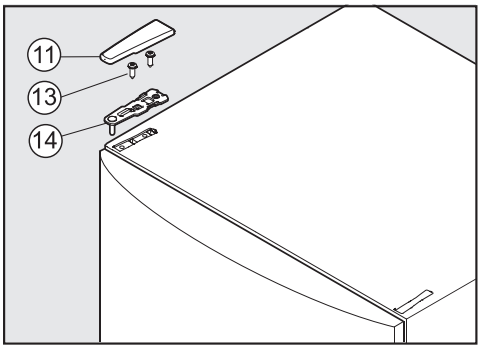

- Fit hinge plate ⑭ onto the opposite side and secure it with screws ⑬. If necessary drill pilot holes for the screws or use a battery operated screwdriver.
- Refit cover ⑪ on the opposite side.
- Align the door with the appliance housing using the long slot in the lower hinge plate. Then tighten the screws.

Replacing the upper soft-close door mechanism:

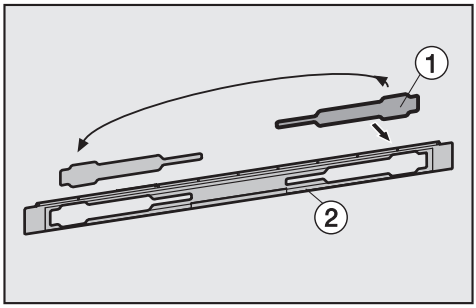

- Remove cover ① from panel ②, rotate it by 180° and refit it on the other side.

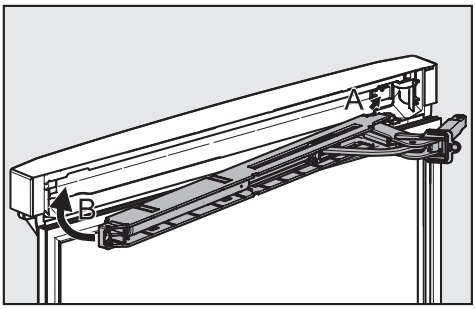

- Insert the soft-close mechanism back into the door, starting at the right hand side.
- Slide the soft-close mechanism back into the door as far as it will go towards the appliance using a flat-headed screwdriver.

The screw holes on the left and right must line up perfectly.

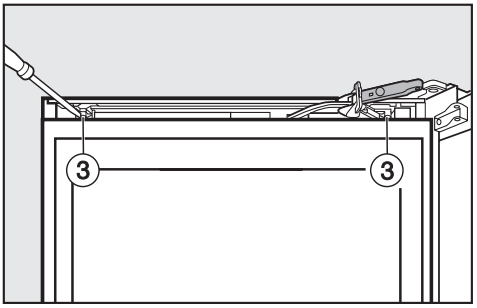

- First screw the soft-close mechanism onto the appliance side, then onto the handle side ③, pushing it firmly towards the appliance.

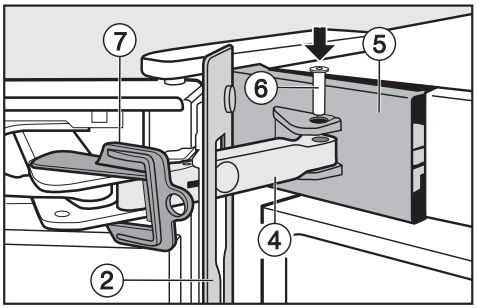

- Attach panel ② to soft-close mechanism bracket ④.
- Push the cover ⑤ on from the side so that the openings for the pin ⑥ are vertically aligned.
- Align bracket ④ to the hinge plate, and insert pin ⑥ from above so that the right angle fits into the recess.
- Clip cover ⑤ into position.

Changing the door hinging

Make sure that cover ⑤ fits properly so that the door can be closed without hindrance and the pin is protected.

- Remove retaining clip ⑦.

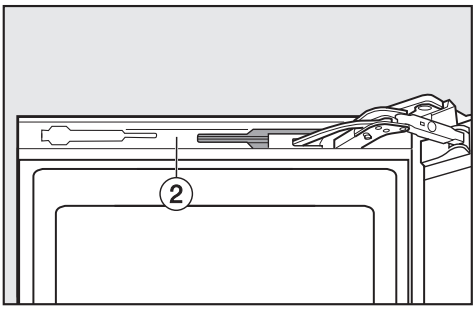

- Replace panel ② onto the soft-close mechanism from above, clicking it back into place first at the bottom and then at the top.
- Close the upper door.

Refitting the handle:

Please make sure you follow the instructions below carefully when you refit the handle. The door seal will be damaged if the handle is fitted incorrectly.

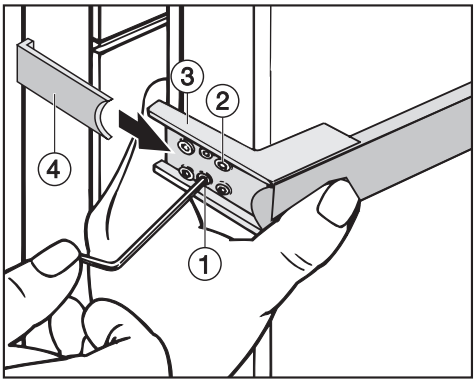

- Loosely attach the handle to the opposite side of the door with the two front screws ②.

Mounting plate ③ must be positioned on the side of the door so that when the door is **closed** it is flush with the side of the appliance.
If this is not the case,

- tighten both grub screws ① with a suitable allen key until mounting plate ③ lines up correctly.
- Then tighten all 4 fixing screws ②.
- Slide the side section of the handle ④ into the guides on the mounting plate until it clicks into place.

It is important to check that the side section of the handle ④ does not come into contact with the door seal when opening the door, as this would damage the door seal permanently.

If, after you have refitted the handle, you find that the side section does touch the door seal when the door is opened:

- Realign mounting plate ③ with grub screws ① until the mounting plate and the side section of the handle ④ are at the correct angle and the side section does not touch the door seal when the door is opened.

Aligning the appliance doors

The appliance doors can be aligned with the housing after they have been fitted.

In the following illustration the door is shown open to make it easier to see what you have to do.

Align the **lower door** using the long outer slots in the lower hinge plate:

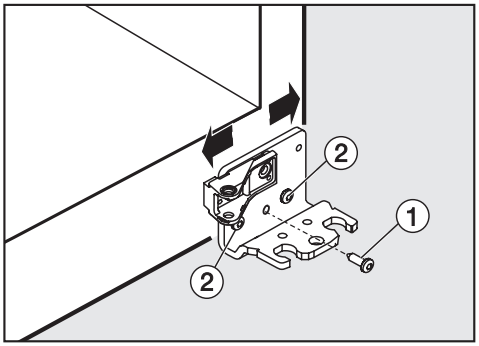

- Remove centre screw ① from the hinge plate.
- Slightly loosen both outer screws ②.
- Align the door by sliding the hinge plate to the left or right.
- Then tighten screws ② again. Screw ① does not need to be refitted.

Align the **upper door** using the long outer slots in the middle hinge plate:

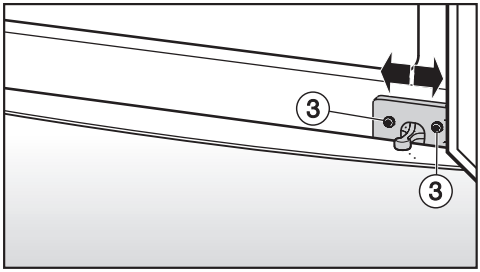

- Slightly loosen both screws ③.
- Align the door by sliding the hinge plate to the left or right.
- Then tighten screws ③.

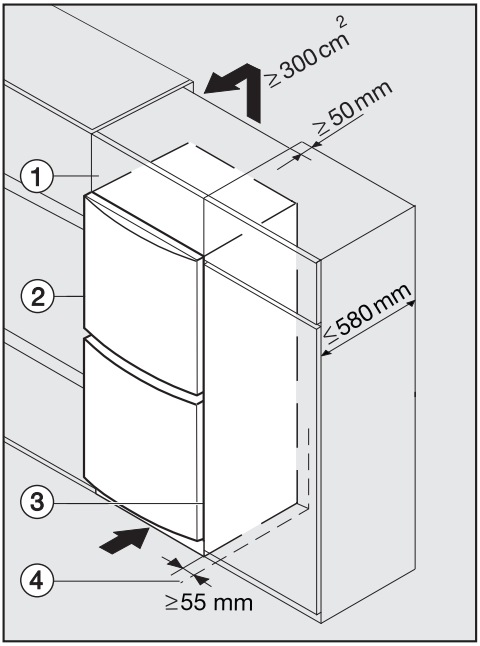

① Top box

② Appliance

③ Housing unit

④ Wall

The appliance can be installed in a kitchen run. To match the height of the rest of the kitchen, the appliance can be fitted with a suitable top box ①.

A ventilation gap of at least 50 mm depth must be allowed for behind the appliance across the entire width of the top box for air to circulate.
The cross section of the air outlet under the room ceiling must be at least 300 cm^2 to ensure that air can circulate without hindrance. Otherwise the appliance has to work harder, resulting in an increase in electricity consumption.

The air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.

When built into a kitchen run (max. depth 580 mm) the appliance can be installed directly next to a kitchen furniture housing unit. The appliance door will protrude in front of furniture fronts at the sides by 34 mm and by 55 mm in the middle of the door. This enables the doors to be opened and shut without being obstructed.

When installed **next to a wall** ④ a distance of approx. 55 mm must be maintained on the hinge side between the wall ④ and the appliance ②, so that the doors and the handles have sufficient space for opening.

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China
Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Miele (Hong Kong) Limited
41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

India
Miele Appliances India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Germany - Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh

Ireland
Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710, Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie

New Zealand
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved / 5209

M.-Nr. 07 808 300 / 00

KWTN 14826 SDE ed

CE